4 Transmitter frequencies selectable

1-channel manual photoelectric amplifier

Product Data **Electrical Data**

Supply voltage 24 V dc, 24 V ac, 115 V ac or 230 V ac Voltage tolerance +/- 15% Power consumption Max. 3 VA Output: relay
Output: NPN transistor 1 open / 1 closed, 250 V ac / 3 A, 120 V ac / 5 A 40 mA / 30 V dc

Output: PNP transistor $5~\text{mA} \, / \, 12~\text{V}$ dc (for PA 12 A/B 003: 40 mA / 24 Vdc)

Environmental Data Temperature, operation -10 to +50 °C Sealing class IP 40 CE Approvals


Applicable Remote Sensors & Sensing Ranges					
Remote Sensor Series	100	110	120		
	Sensing Range				
Long range mode	15 m	35 m	60 m		
Short range mode	5 m	12 m	20 m		

PA 12 B PA 12 A Sensitivity adjustment \Box Off delay adjustment Signal level indicator ;õØ (ODD Output indicator On delay adjustment Alarm indicator -Power on indicator -Function switches

Connection

Illustration

Wiring Diagrams

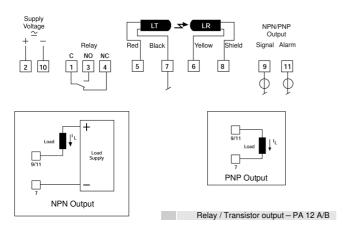

Connection Steps

- Check the power supply and output of the amplifier type. 1
- 2 Make sure power is off. Connect wires to the 11-pin socket according to wiring diagram.
- 3 Plug-in the amplifier into the 11-pin socket. Turn power on.
- When the amplifier is operating, the green LED (power-on) is on.

Adjustments

Lang/Shart	Range Selection	
Long/Short	Range Selection	
Short range	Short range mode enables the system to operate at 30% of maximum range, in order to ease sensitivity adjustment at shorter ranges and to reduce the response time.	ON
Long range	Long range mode enables the system to operate at 100% (maximum range).	ON

Output Mode Selection

Website: www.telcosensors.com

info@telcosensors.com

The output mode can be selected via the light/dark switch. Refer to Output Logic table for reference.

Light Operated

Enables the output to be inactive (red LED is off) when there is an object present in the detection area.



This product is not a safety system and must not be used as such. It is not designed for personnel safety applications, and must not be u as a stand alone personnel safety system.



Dark Operated

Enables the output to be active (red LED is on) when there is an object present in the detection area



Frequency Selection

The PA 12 photo amplifier allows to use, up to four individual amplifiers and sensors with different frequencies that reduce the risk of cross-talk significantly. However, it is important to point out, that if two or more sensors sets are in operation within a confined space, and if the neighbour signal gets too high, cross-talk may occur.

Four different transmitter frequencies can be selected with dip switch nº 3 and nº 4

Transmitter frequency				
F1	F2	F3	F4	
	ON	ON	ON	

Output Logic					
Detection (thru beam)	Output mode	Relay Output	Transistor Output		Output
		, ,	NPN	PNP	indicator
Object present	Dark	1 3 4	Closed	Open	On
	Light	1 3 4	Open	Closed	Off
Object absent	Dark	1 3 4	Open	Closed	Off
	Light	1 3 4	Closed	Open	On

Alarm Output

The alarm LED indicates if the adjustments are incorrect, due to, for example, contamination

Signal Level	Signal Status Indicator	Alarm Indicator	Alarm Transistor Output	
			NPN	PNP
Low Level	Off	On	Closed	Open
Normal Level	On	Off	Open	Closed

Sensitivity Adjustment

Maximum sensitivity can be used for most applications and is advised for applications with contaminated environments e.g. dirt, water and dust. Increase the sensitivity to maximum by turning the potentiometer to full clockwise position.

Sensitivity adjustment may be required in applications where objects to be detected are small or translucent. Proceed with the following steps:

- Adjust the sensitivity to maximum by turning the potentiometer to full clockwise
- Check there is no object present interrupting the beam and the sensor pair is correctly aligned and within their specified sensing range. 2
- 3 Select target object with smallest dimensions and most translucent surface.
- Place target object between remote transmitter and receiver sensors. If the output status changes, adjustment is not required. If the output status has not changed proceed to step 5. 4
- Decrease the sensitivity by turning the potentiometer counter clockwise until the output is activated.
- 6 Remove target object. Observe the output status has changed.

If the signal level is low, the green LED (signal status) will go off. In general, it is recommended to increase the sensitivity till the LED goes on and to check the following:

Alignment of sensors

Transmitter and receiver sensors are within sensing range

Sensor heads are not excessively contaminated

Time Delay Adjustment

Off delay

The on delay enables output signal to only activate if an object in the detection area is present for the adjusted time period. (In Dark operated mode)

The off delay enables output signal to remain activated for the adjusted time period. The time delay is adjustable between 0 - 10 sec.

Increase or decrease on delay by turning potentiometer clockwise or On delay counter clockwise respectively

Increase or decrease off delay by turning potentiometer clockwise or

V 1.1 Part Number: 0666220640 January 2006 edition